## SCREEN WINCH SYSTEM INSTALLATION MANUAL FOR SCREENS FROM 300 cm. UP TO 450 cm. of width

Before installing the screen winch system, please read the following instructions carefully:



- The screen winch system must be used INDOORS ONLY.
- The screen winch system must be installed by qualified personnel only.

• AFTER UNPACKING THE SCREEN WINCH TAKE CARE THAT AFTER RELEASING THE PACKAGING FOAM FROM THE TRACTION STEEL CABLES, YOU HAVE TO MOUNT THE BEAM UNDER THE STEEL CABLES. THIS IN ORDER TO PREVENT THAT THE STEEL CABLES RAVEL UP INSIDE THE WINCH HOUSING.

• NEVER CONNECT MORE THAN ONE MOTOR TO THE SAME SWITCHER. USE THE SUPPLIED SWITCHER ONLY.

- NEVER CONNECT SCREEN WINCH MOTOR AND SCREEN MOTOR TO THE SAME SWITCHER.
- IN CASE OF MAINTANANCE, UNPLUG THE POWER SUPPLY.

• In case the screen winch is controlled via relais, take care that the control system is programmed so there is no tension on the relais for at least 1 sec. during switching between rolling up and rolling down operations and viceversa.

• IT IS FORBIDDEN TO OPERATE SCREEN WINCH SYSTEM AND PROJECTION SCREEN SIMULTANEOUSLY (RISK OF PERMANENT DAMAGE ON THE MOTORS. YOU HAVE TO ACTIVATE FIRST THE WINCH UNIT AND AFTER IT HAS REACHED THE BOTTOM END STOP, YOU CAN ROLL DOWN THE PROJECTION SCREEN, TAKING CARE TO UNPLUG POWER SUPPLY TO THE WINCH BEFORE OPERATING ON THE SCREEN.

• IN CASE OF NEED TO ACTIVATE BOTH MOTORS SIMULTANEOUSLY, PLEASE INSTALL THE MULTIPLE CONTROL INTERFACE SET BETWEEN SWITCHER AND WINCH AND BETWEEN SWITCHER AND PROJECTION SCREEN.

• Incorrect use of the screen winch system, including exceeding the maximum lifting weight of 36 kg., would be dangerous and invalidates the warranty.

- Half-yearly the screen winch system has to be checked. Please see check register on page 7 of this document.
- It is forbidden to stay under the screen winch system.

• For any repairing, please contact directly the dealer you purchased the unit from.

The manufacturer and his agents do not take responsibility for any damage to property or personal injury if the winch is installed/used outside of recommended specifications.



This product uses a 230 V AC motor. DO NOT attempt to carry out repairs to the motor, there are no user serviceable parts.

Incorrect servicing could lead to risk of electric shock. For any repairing, please contact directly the dealer you purchased the unit from. In the event of a fault please contact the dealer /supplier. Warranty is 24 months Return To Base.

The screen winch system is  $\mathbf{C} \in \mathbf{C}$  certified.

## **TECHNICAL SPECIFICATIONS**

Motor: Power 50 Nm Speed 11 rpm Consumption 255 W

Roll down speed: 19 sec. per metre Net weight of the Screen Winch System: kg. 40 Maximum roll down stroke: 7 mt. Maximum load that can be hung to the beam: kg. 36

## SUPPLIED EQUIPMENT LIST:

When you open the packaging, please **CHECK** that it contains **ALL** the components below:

- 1. 1x SCREEN WINCH SYSTEM
- 2. 1x BEAM
- 3. 1x UP/DOWN SWITCH
- 4. 1x CABLE COILER
- 5. 3x FIXING BRACKETS FOR FIXING THE SCREEN WINCH TO THE CEILING
- 6. 3x BRACKETS FOR FIXING THE SCREEN TO THE BEAM
- 7. 1x L-FORM BRACKET
- 8. 1x CONNECTOR BOX
- 9. 1x INSTALLATION MANUAL

	SCREEN WINCH
1/	
	it e
<b>^</b>	
SCREEN	

This Screen Winch System is made to lift the screens models COMPACT – MAJOR – ELLIPSE and E-LITE manufactured by Euroscreen SRL.

In order to mount this winch system and the projection screen, please read **carefully** the following instructions:

1. First of all fix to the ceiling the 3 brackets for the screen winch, taking care that these 3 brackets are perfectly aligned and also mounted horizontally. From the central bracket, the left and right brackets have to be mounted at 98 cm distance from the central bracket. (see Fig. 1). Each bracket has to be mounted to the ceiling like showed in Fig. 2 with 4 suitable screws or bolts (**fixings are not supplied**).

2. Fix the screen winch (seen from the front with the power cable at the right side of the housing) at the brackets as shown in Fig. 3. First move the clamps close to the winch

housing and tighten the nuts inside the bracket as shown in Fig. 3. Now in order to secure the clamps, tighten the 2 front screws of the bracket like shown in Fig. 4.



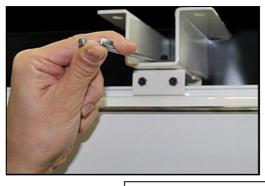


Fig. 3


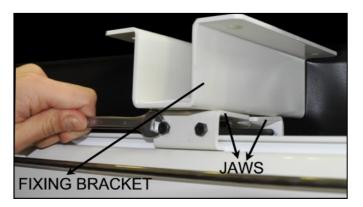


Fig. 2


Fig. 4

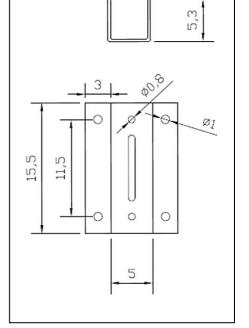

**Drawing of the bracket** for fixing the screen winch system to the ceiling

3. Now connect the power cable of the screen winch to the 220V mains. The winch is equipped with a safety device that will prevent the roll down of the winch in case that the traction parts of the motor will fail.

For the electrical connection of screen winch system, safety device and screen, see schematic diagram below.

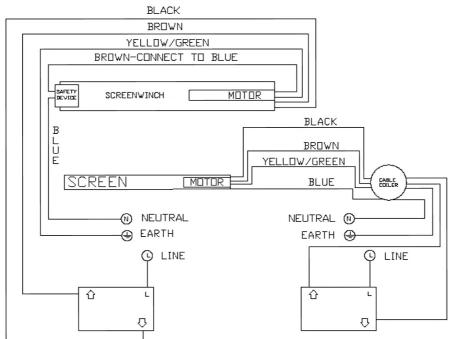

#### IF, AT THE FIRST OPERATION, THE SCREEN WINCH WILL NOT ROLL DOWN, IT IS LIKELY THAT THE SAFETY SYSTEM IS IN LOCKED MODE; THIS CAN BE CAUSED DUE TO ROTATION OF THE SCREEN WINCH DURING TRANSPORT.

In order to check the safety system, follow the next steps:

- Remove the safety system unscrewing the four screws and pull out it from the winch.
- Manually rotate the central square hole by using your finger, in both directions, taking care that **position TOP** is on the upper part (see picture below).
- Reposition the safety system in the original position, taking care to keep **position TOP** is on the upper part and fix it again with the four original screw.



- 4. Take now the beam and position it under the screen winch, taking care that the front (indicated) of the beam is in the correspondence of the front of screen housing. Take the steel cables coming out of the screen winch and go through the eyebolt and fix them to the L-form bracket, at the beam as shown in Fig.6.
- 5. At the bottom side of the beam you have to mount the remaining 3 brackets (see Fig. 5). Take care that the left bracket has to be mounted at 20 cm. from the left end side of the beam and the right racket has to be mounted at 20 cm. from the right hand side of the beam. Now fix the screen housing at these brackets taking care that the power cable of the screen is at the right side of the housing.



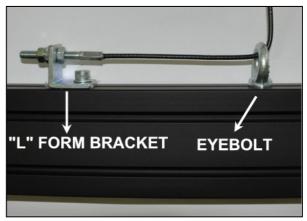


Fig. 5


Fig. 6

- 6. With the winch completely rolled up, you have to adjust the screws fixed on the L-form brackets, which are fixed on the beam (see fig. 6) so that the beam is perfectly horizontal and check also that the steel cables from the winch to the beam are perfectly in vertical position. In case the steel cables are not perfectly vertical, please move the metal ring on the beam, left or right in order to position the steel cable vertically. In case you have moved the eyebolt, check carefully that you fix it again sturdy to the beam.
- 7. To connect the mains 220V to the screen, you have to use the cable coiler that is included in the packaging. Mount the cable coiler to the ceiling behind the screen winch housing at the right side (see Fig. 6B), using suitable screw anchors (**fixings are not supplied**).



Fig. 6B – CABLE COILER

8. Now fix at the rear side of the beam the L form bracket as indicated in Fig. 7 and fit the output power cable of the screen winch through the bracket and fix it with two wire clamps as shown in Fig.7 in order that it remains fixed when the beam moves up and down. At this step, you have to connect to the incoming power cable of the cable coiler fixed at the ceiling a plug and connect it to the mains up in the ceiling.

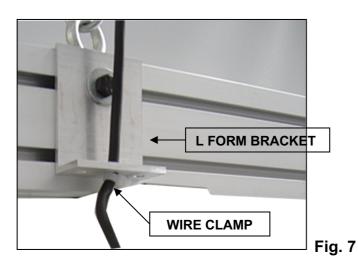

9. Now fix the power connector box to the beam the as shown in Fig. 8 and connect the end of output power cable of the cable coiler to the power cable that comes out of the screen housing.





10. At this step, you have to connect the incoming power cable of the cable coiler to the mains 220V (see page 3).

**WARNING:** Once you have installed the product, when you switch on the Screen Winch System you will hear a rhythmical ticking which means that the safety device is working properly.

## END STOP ADJUSTMENT OF THE SCREEN WINCH



WARNING: THE END STOP ADJUSTMENT HAS TO BE DONE CAREFULLY, OTHERWISE THE SCREEN WINCH CAN BE DAMAGED PERMANENTLY. **DO NOT SET THE BOTTOM END STOP LOWER THAN 7 MT**. In case the bottom end stop is set lower than 7 mt. DANGER OF FALLING DOWN OF THE PROJECTION SCREEN HOUSING.

In case, after installation, the end stops of the Screen Winch System need to be changed, please, proceed as follows:

- at the right side of the Screen Winch System, in the lower part of the cabinet you will find two round holes: the first hole, which is the closest to the steel cables, will allow you to enter with a 4 mm. Allen key. You can adjust the BOTTOM END STOP as follows (see Fig. 9 and Fig. 10):
  - Turn clockwise to increase down limit
  - Turn counter clockwise to raise bottom stop point

The other hole, allows you to adjust the UPPER END STOP:

- Turn counter clockwise to lower the upper stop point

# DO NOT RAISE UP LIMIT, OTHERWISE THE SCREEN WINCH SYSTEM CAN BE DAMAGED PERMANENTLY.

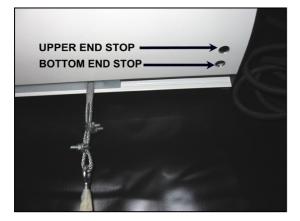


Fig. 9

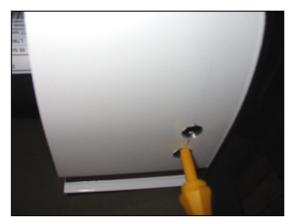


Fig. 10

WARNING: do not change the end stops of the projection screen, otherwise you will invalidate the warranty on the screen.

		<b>SCREEN WINCH SYSTEM - CHECK REGISTER</b>		
SCREEN WINCH SYS	STEM PURCHASE DATE:			
HALF-YEARLY CHECK DATE	YEARLY CHECK DATE	CHECK RESULT (POSITIVE - NEGATIVE)	NOTES	
		(*		
HALF-YEARLY CHECK	Check if rolling up and rolling down is working properly, without frictions or decelerations. Check that if you can hear the ticking noise of the safety brake is present. Check with the end user that projector lift and projection screen (if this is the configuration)			
	operate in different times	s (not at the same time	2).	
YEARLY CHECK	Check steel cables covered by black PVC – no steel wires have to be visible outside the black PVC scabbard. Check of the ceiling fixing brackets of the screen winch system			
	Check that the end stops are set properly, so that in the rolled down position (screen winch system completely open) it remains at least 3 turns of steel wire onto the roller tube.			
	Check that bolts on the bottom ends of the steel cables are tightly fixed.			
	Check if rolling up and rolling down is working properly, without frictions or decelerations.			
	Check that if you can hear the ticking noise of the safety brake is present. Check with the end user that projector lift and projection screen (if this is the configuration)			
		operate in different times (not at the same time).		